


# BETTER BARRIERS

# BARRICADE & BARRIER SAFETY FENCE

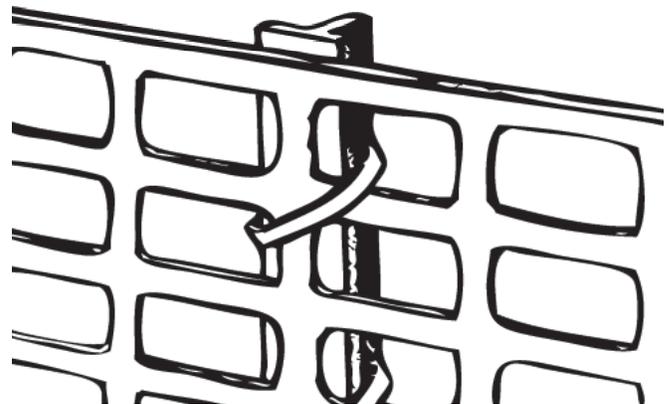

## ACCESSORIES REQUIRED

Suggested accessories required for installation of 50 feet of our Better Barriers™ Barricade or Barrier fence.

- 7 steel T-Posts (minimum 6 feet high)
- 35 locking ties approximately 8"-10" long

## INSTALLATION INSTRUCTIONS

1. T-Posts should be inserted a minimum of 1.5' in the ground and a maximum of 8' apart.
2. Secure the fence and the T-Post together using locking ties spaced at 1' intervals (see illustration).
3. To connect fencing sections, overlap 2 strand sections from each end and weave a 1" x 2" slat through the overlapped strand.
4. Fence should be tensioned by hand only. **DO NOT USE MECHANICAL TENSIONERS.**